SCOSCHE

Si usted tiene más preguntas, llame nuestro peaje liberta la línea técnica de ayuda en:



mmč, E eb serotoenoo noo oibus eb eldsO (f) MA eb ligital de 3,5mm


LISTA DE PIEZAS

de cables cargadores USB.

entrada de 3,5mm. También tiene otro conveniente puerto para carga de USB para la mayoria


FM. Este sistema tambien le permite integrar cualquier estilo de reproductor tipo MP3 por la unidad està diseñada con la tecnologia más reciente para transmitir sonido por una trecuencia Felicitaciones por la compra de su transmisor digital de FM Scosche modelo FMTD1. Esta

ИТВОРИССІОИ

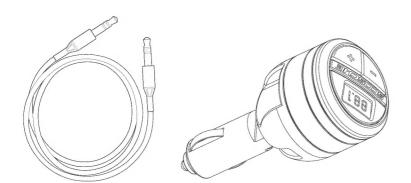

CON PUERTO CARGADOR USB MH 30 JATIDIO ROSIMZNART

DIGITAL FM TRANSMITTER WITH USB CHARGE PORT

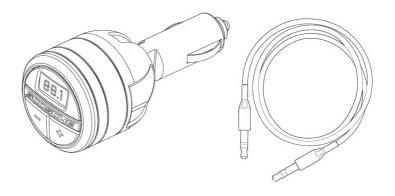

INTRODUCTION

Congratulations on purchasing the Scosche FMTD1 Digital FM Transmitter. This product is designed to give you the latest technology in transmitting sound through an FM Frequency. This system also allows you to integrate any style of MP3 player via a 3.5mm input. Conveniently there is also a USB charging port for most USB charging cables.

PARTS LIST

(1) Digital FM Transmitter (1) 3.5mm to 3.5mm Audio Cable



If you have any further questions, call our toll free technical help line at: ©2007 SCOSCHE INDUSTRIES, INC.

VISTA GENERAL

PIVOTS

FIGURE 3

OPEN CASE!

2

USB Output: 5v DC Power (500ma max) NOTE: To avoid danger of electrical

shock, fire, or personal injury, DO NOT



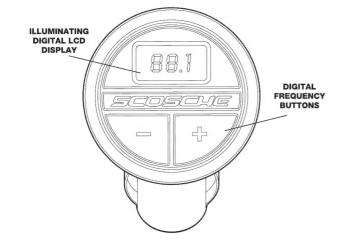


FIGURE 2

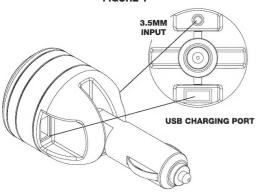
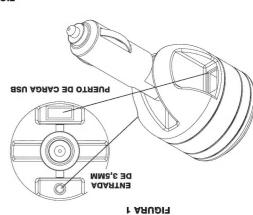


FIGURE 1






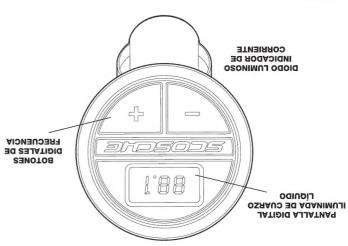


FIGURA 3

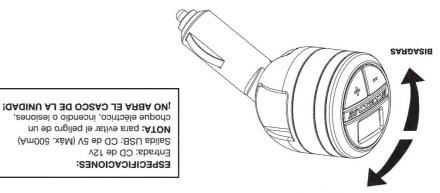

OVERVIEW


2

OPERACION

CONEXION DEL FMTD1

dole uno en la salida para audifonos y el otro en la entrada de 3,5mm atrás del FMTD1. 2. Para iPod", iPhone" y reproductores MP3, use el cable de audio con dos terminales de 3.5mm, insertá tablero del vehiculo. La pantalla indicadora de frecuencia también le indica si el FMTD1 está con corriente. 1. Enchufe el FMTD1 en el encendedor de cigarrillos o cualquier otro tomacorriente de CD de 12V en el

FIGURA 4

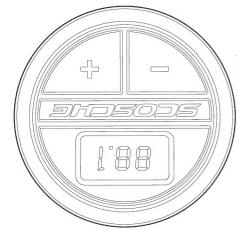

SINTONIZACION DEL FMTD1

(vea las Figuras 2 y 4). Las frecuencias aparecen deseada oprimiendo el botón (+) o (-) en el FMTD1 conectados, seleccione la frecuencia de FM 1. Con el FMTD1 enchufado y con todas los cables

Consejo práctico: Use la frecuencia FM con la

del sonido de su MP3 cuando lo escuche señal más débil, esto maximizará la calidad en la pantalla de cuarzo liquido.

 Sintonice el radio a la estación seleccionada a través del radio.

3. Encienda su iPod, iPhone o reproductor MP3 y en la unidad FMT1.

radio a esa nueva frecuencia. una frecuencia diferente en el FMTD1 y sintonice el Si hubiese demasiado ruido o estática, seleccione para estaciones FM preseleccionadas de su estéreo. estación de radio selecciona en uno de los botones del estéreo. Para referencia futura programe la máximo y luego regule el volumen con los controles Gradúe el volumen en el reproductor portátil a el escuchará su sonido por los altavoces del estéreo.

CARGANDO OTROS DISPOSITIVOS POR EL PUERTO USB

2. Enchufe el otro terminal del cable en el dispositivo portàtil. dispositivos, vea las especificaciones del USB en el manual del propietario correspondiente. 1. Enchufe el cable USB de su iPod, iPhone o reproductor MP3 en el puerto atrás del FMTD1. Para otros

Cerciórese que el terminal de 3,5mm del cable de	El sonido iPod no se escucha por los altavoces del radio.
	sol you edouge es on bodi obinos IA
Inspeccione el fusible del encendedor de cigarrillos y/o que el FMTD1 esté insertado hasta el fondo del tomacorriente.	El transmisor no enciende.
госпос	AMBLBORG


3

CONNECTING THE FMTD1

- 1. Plug the FMTD1 into the cigarette lighter or 12v DC power socket in your dash. The frequency display helps you indicate that the FMTD1 has power.
- 2. For iPod®/iPhone™/MP3 players, use the 3.5mm to 3.5mm audio cable. Insert the 3.5mm cable into the headphone jack of the iPod/iPhone/MP3 player then plug the other end of the cable to the 3.5mm input on the FMTD1 (located on the rear side of the FMTD1). See Figure 1 for reference.

TUNING THE FMDT1

- 1. With the FMTD1 connected and all cable connections made, select a FM frequency range by pressing the (+) or (-) buttons on the FMTD1, until your desired frequency is selected (see Figures 2 & 4). The frequencies are displayed on the LCD screen. Hint: Scan your FM radio for the frequency that comes through the LEAST as far as signal goes, this may maximize the sound quality of the MP3 on your radio.
- 2. Tune the radio to the corresponding station
- selected on the FMTD1 unit. Power up and play your iPod/iPhone/MP3 player. You should hear sound from the iPod/iPhone/MP3 player through your stereo speakers. Adjust the volume on your portable player to about 34 of the maximum volume, and then adjust the volume output through the stereo. For future reference, set the selected radio station to a FM radio preset button. If there is excess/unwanted static/noise, then select a different frequency on the FMTD1 and change the radio to the new selected frequency.

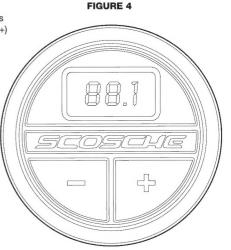

that you have chosen on the transmitter.

CHARGING OTHER PRODUCTS VIA THE USB PORT

- 1. Plug in the USB cable supplied with your iPod/iPhone/MP3 player or other device, cell phone, etc. into the back side of the FMTD1 (for other products, please reference your owner's manual for USB specifications).
- 2. Plug in the other side of the cable into your portable device.

TROUBLESHOOTING **PROBLEM** SOLUTION Try checking the cigarette lighter fuse and/or The transmitter does not turn on. make sure the FMTD1 is inserted properly into the socket. Make sure the 3.5mm audio cable is properly There is no sound from the iPod through the radio. connected. Also make sure the volume on the portable unit is turned up 34 of the maximum volume. Make sure the radio corresponds to the frequency

3

OPERATION

FCC AUTHORIZATION

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: 1) This device may not cause interference, and 2) this device must accept any interference that may be received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modification could void the user's authority to operate the equipment.

FCC ID: IKQFMTD1

LIMITED WARRANTY

Scosche Industries Inc. warrants this product to be free from defects in material and workmanship for a period of 90 days from purchase. This Scosche product is sold with the understanding that the purchaser has independently determined the suitability of this product. This warranty is offered to the original purchaser of the product only. This warranty does not cover the product if physically damaged, subject to negligence or misuse, alteration, accident, or an act of GOD. This warranty does not apply to product which has water or physically damaged by accident or which has been misused. disassembled or altered.

The original dated sales slip or proof of purchase will establish warranty eligibility. If the product should prove defective within the warranty period, return the product with proof of purchase to Scosche Industries Inc. Scosche, at its option, will replace or repair the product free of charge and return the product postage paid.

In no event shall Scosche Industries, Inc. be responsible for claims beyond the replacement value of the defective product. or in any way be liable or responsible for consequential or incidental damages. No empress warranties and no implied warranties, whether for fitness or any particular use or otherwise, except as set forth above (which is made expressly in lieu of all other warranties) shall apply to products sold by Scosche. Scosche Industries cannot be held responsible for discrepancies/inconsistencies that may occur due to automotive manufacturing changes or option.

iPod® & iPhone™ are trademarks of Apple Inc., registered in the US and other countries.

AUTORIZACION DE LA FCC

El fabricante no se responsabiliza por las interferencias de señales de radio o TV causadas por modificaciones no autorizadas dispositivo acepte cualquier interferencia que pueda recibir, incluyendo la interferencia que le cause operación inadecuada. Su operación està sujeta a las siguientes dos condiciones: 1) Que este dispositivo no cause interferencia y 2) que este Este dispositivo cumple con el acápite 15 del reglamento de la FCC (Comisión Federal de Comunicaciones de los EE.UU.).

s este ednibo. I sies modificaciones pueden canceiar la autorizacion dei ususio para operar el duipo.

FCC ID: IKQFMT1

fabricantes de automóviles.

acoscue jugnazues juc. Baisuris este producto contra defectos de material y de mano de obra por un periodo de **ADATIMIL AITNARAÐ**

uo seus uesbousspie bor quereuciss o iucousisteuciss dne brajentiste depido s csupios n obcioues de jos reemplaza expresamente cualquier otra garantia) se aplicara a los productos vendidos por Scosche. Scosche Industries implicita, ya sea de aptitud para cualquier uso en particular o por lo contrario, excepto como se indica más arriba (lo cual defectuoso, o sera responsable o culpable por danos indirectos o incidentales. Minguna otra garantia, ya sea expresa o En ningún caso, Scosche Industries, Inc. será responsable por reclamos más allá del costo de reemplazo del producto Industries Inc. Scosche, a su criterio, reemplazará o reparará el producto sin cargo y se lo retornará cobrándole el envio. se eucneurus gerectuoso gentro del periodo de garantia, retornelo junto con un comprobante de compra a Scosche La validez de esta garantía estará deferminada por el recibo original fechado u otro comprobante de compra. Si el producto bor accidentes o abusados, alterados o desarmados.

seciqeutes o canasa de ineiza mayor. Esta datantia no cipte broductos que nayan ado danados por agua o insicamente, producto. Esta garantia no cubre daños físicos al producto causados por negligencia o uso incorrecto, abuso, alteraciones, independientemente que el mismo es apropiado. Esta garantia es válida solamente para el comprador original de este 90 dias desde la fecha de compra. Este producto Scosche se vende entendiendo que el comprador ha determinado

ibode & iphone on marcas de propiedad de Apple Inc. registradas en EE.UU. y otros países.